

## Veilux VIK-USB WEB PTZ Controller

# Advanced PTZ Controller VIK-USB User's Manual



**V1.06-n017** This document contains preliminary information and subject to change without notice.

## Chapter 1 Introduction

### In This Manual

**Overview:** This manual covers the operation of the VIK-USB keyboard.

### VIK-USB keyboard

This remote keyboard is an accessory for PTZ dome camera, etc  
It allows the user to control from 1 to 255 camera.

### Features

- Controls from 1~ 255 cameras.
- Multiple protocol supported in each channel
- RS485/RS-422 Communication (Tx : 3 port, Trx : 1 port)
- Programmable user preferences (preset, tour, group, etc)
- Built in 3 Axis proportional joystick
- Easy upload programmed data via serial communication port of PC.
- Built in 2 lines character LCD.
- User password support
- Designed for desktop use
- Programmable transmission speed for each IP (2.4~57.6kbps)

**Note :** units should be set to the communication protocol and the same baud rate.

### Before installation

This keyboard system must be installed by qualified service and installation personnel.

Perform the following steps to install the keyboard system.

A.Unpack all components.

B.Place the keyboard in a convenient location.

**Note: Carefully and completely read the manuals for each piece of equipment before attempting to installation and connect the equipment.**

 
C. Decide on the configuration method.

D. Use one of the following sections to configure the wiring.


## Chapter 1 Introduction


### Hardware Overview

|                              |                                                                                                                                                                                                                                                     |
|------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hardware Components          | This remote keyboard contains easy to use control keys on the front and simple input and output connectors on the back.                                                                                                                             |
| Control Buttons & connection | This unit provides the primary operator interface. Most operations are one or tow button presses. The following Table contains a description for each buttons on the keyboard and ort of cable connection. Use Figure 1 and Figure 2 as a reference |

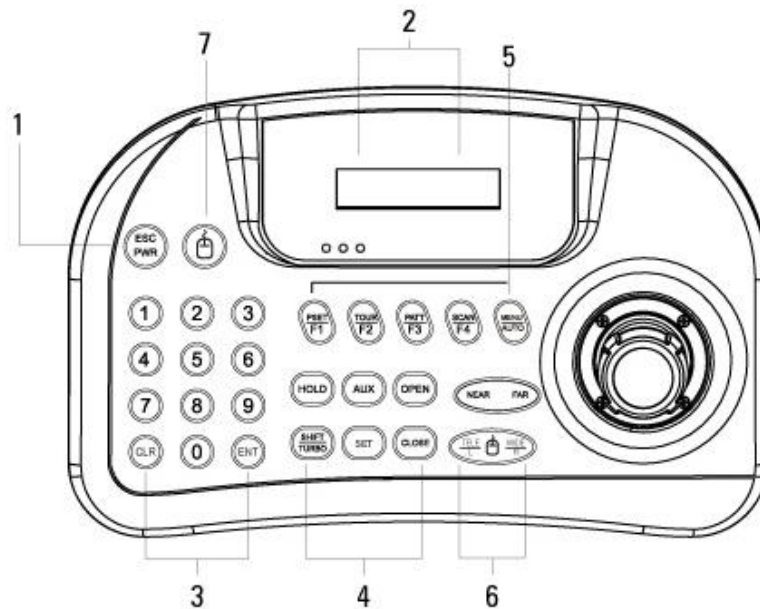

| Number | Button                                                                                                       | Description                                                                                                                                                                                                                                                                      |
|--------|--------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1      | ESC/ POWER<br>            | Pressing the ESC/POWER button enters the power on/off or escape key. Right description led on(red). Pressing it again exits the Power off. (Push the  button 2-3 seconds) and then Power off) |
| 2      | LCD Display<br>16 x 2 Graphic display                                                                        | Display Camera ID, Protocol, function status, general status, etc                                                                                                                                                                                                                |
| 3      | Numbers                                                                                                      | Camera ID setting value change, PTZ setup (1+  ), Main Setup (2+  )                                      |
| 4      | Control Function Keys<br> | Hold : System locking (Unlocking : Input the password 4 digit ****)<br>SHIFT/TURBO : SHIFT – Key for special function (Customize)/ TURBO-High Speed                                                                                                                              |

 
| Number | Button                                                                                             | Description                                                                                                                                                                               |
|--------|----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5      | Function keys<br> | F1 – MENU/AUTO : Function Keys (Preset, Tour, Pattern, Scan, Auto)<br>MENU : Used for Camera(Pan/Tilt) Menu adjustment                                                                    |
| 6      |                   | Camera Focus Control                                                                                                                                                                      |
|        |                   | Camera Zoom Control                                                                                                                                                                       |
| 7      |                   | MOUSE ON/OFF (Mouse Function Key 2-3 Seconds push)<br><br>Mouse Character Description will be display  |

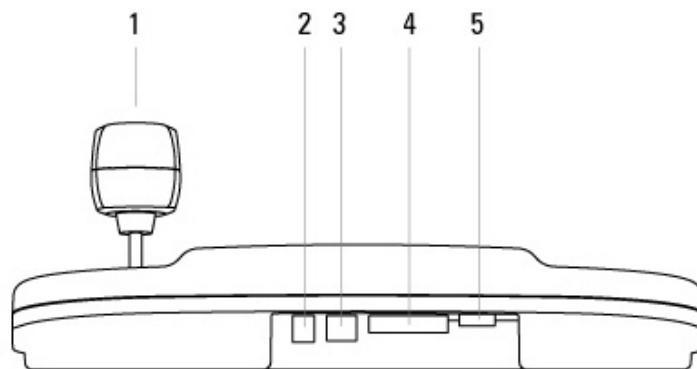 

| Number | Button                                                                                                           | Description                                                                              |
|--------|------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| 1      | Joystick<br>                  | Telemetry Joystick Blt allows precise control of Pan/Tilt/Zoom                           |
| 2      | DC 12V Input<br>              | DC 12V Input, 140 mA                                                                     |
| 3      | USB PORT<br>                  | Universal Serial Bus Port, USB Mouse function<br>(External Equipment communication port) |
| 4      | RS-485<br><br>TRx Tx3 Tx2 Tx1 | RS-485/RS-422 communications<br>(Tx/Rx : 3 port, Trx :1 port)                            |
| 5      | Program                                                                                                          | Download connector(For Program Update)                                                   |

## System Configuration and Wiring

 **Basic Installation** Use the Keyboard Configuration when only one keyboard is connected to the controlled units. Connect the RS-485 output port of Remote keyboard to RS-485 input port of the first controlled unit using the terminal block.

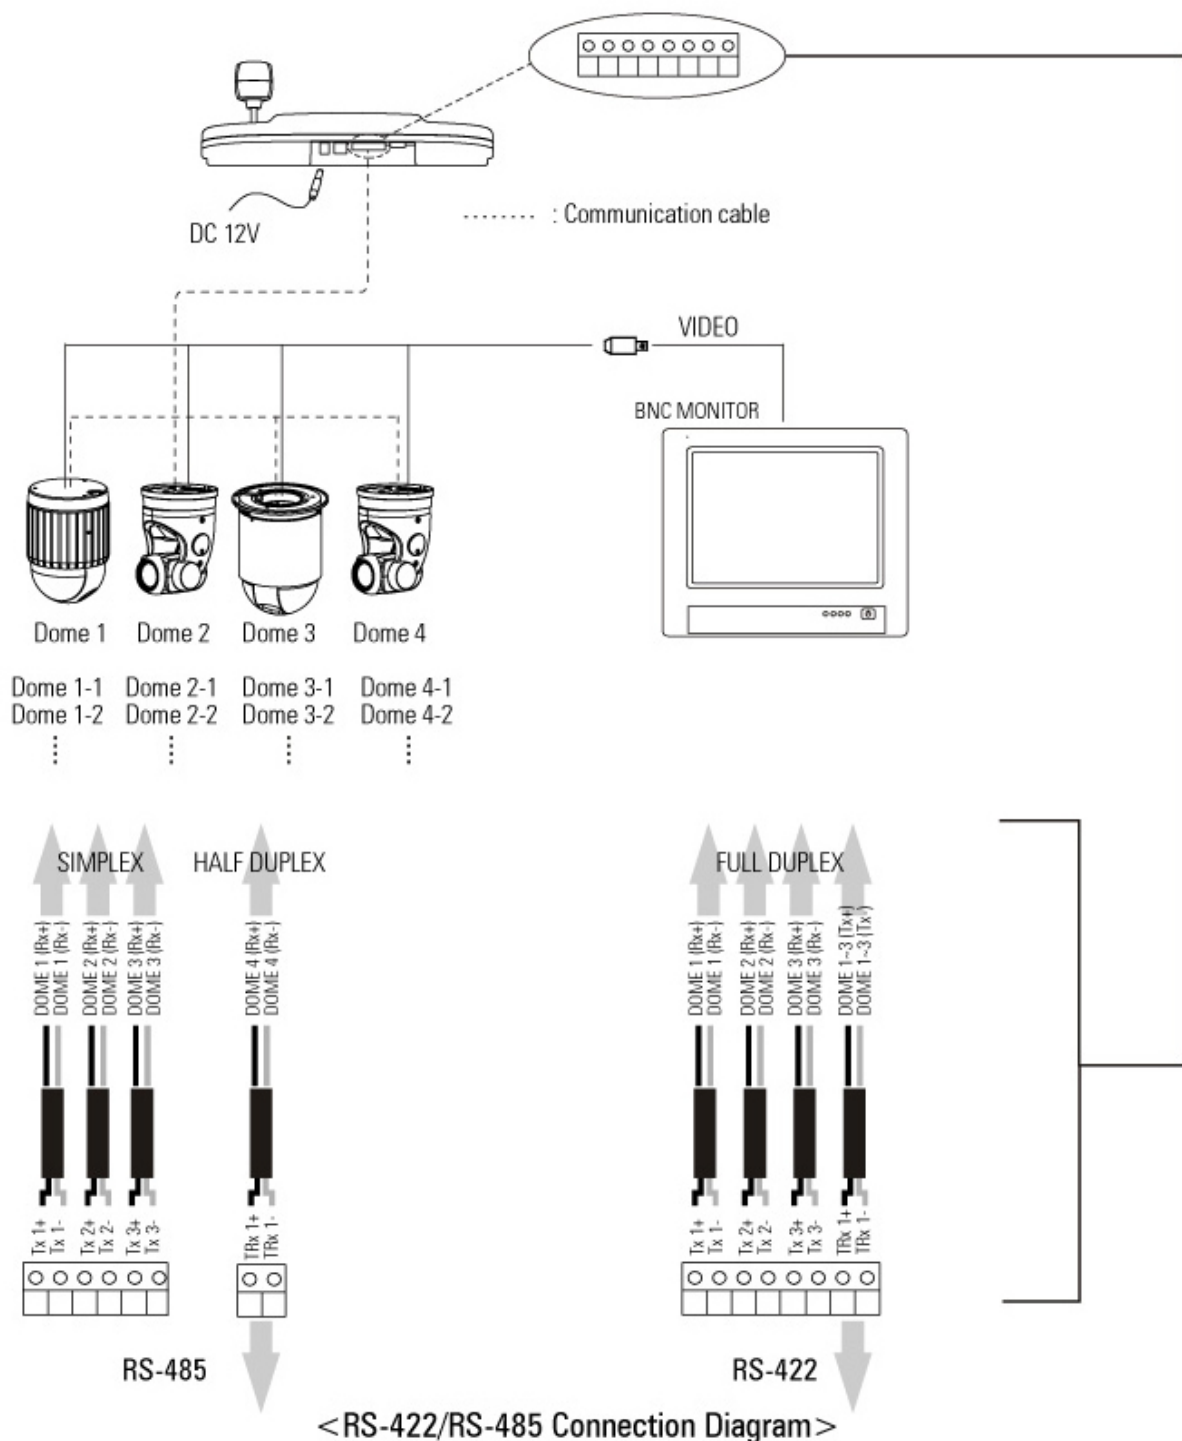


## Chapter 2 System Installation & Typical Applications

### System Installation

|                       |                                                                                                                                                                                                                                                                                                                                                       |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Keyboard Installation | Before you start the keyboard equipment to your system, make sure the units to be controlled are completely installed and everything is working correctly. Before use of this keyboard, you should set the protocol and baud rate (2.4 ~ 57.6kbps) in the PTZ SETUP mode.<br>Use the following steps to set the communication protocol and baud rate. |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### PTZ setup
 
|           |                                                                                                                                                                                                                                                                                         |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PTZ setup | PTZ Setup mode, select 1 +  , (2~3 seconds)<br>Setup screen allows you to make change each programmable clause.<br>Note : The baud rate must be the same between the controlled unit and the keyboard. |
|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

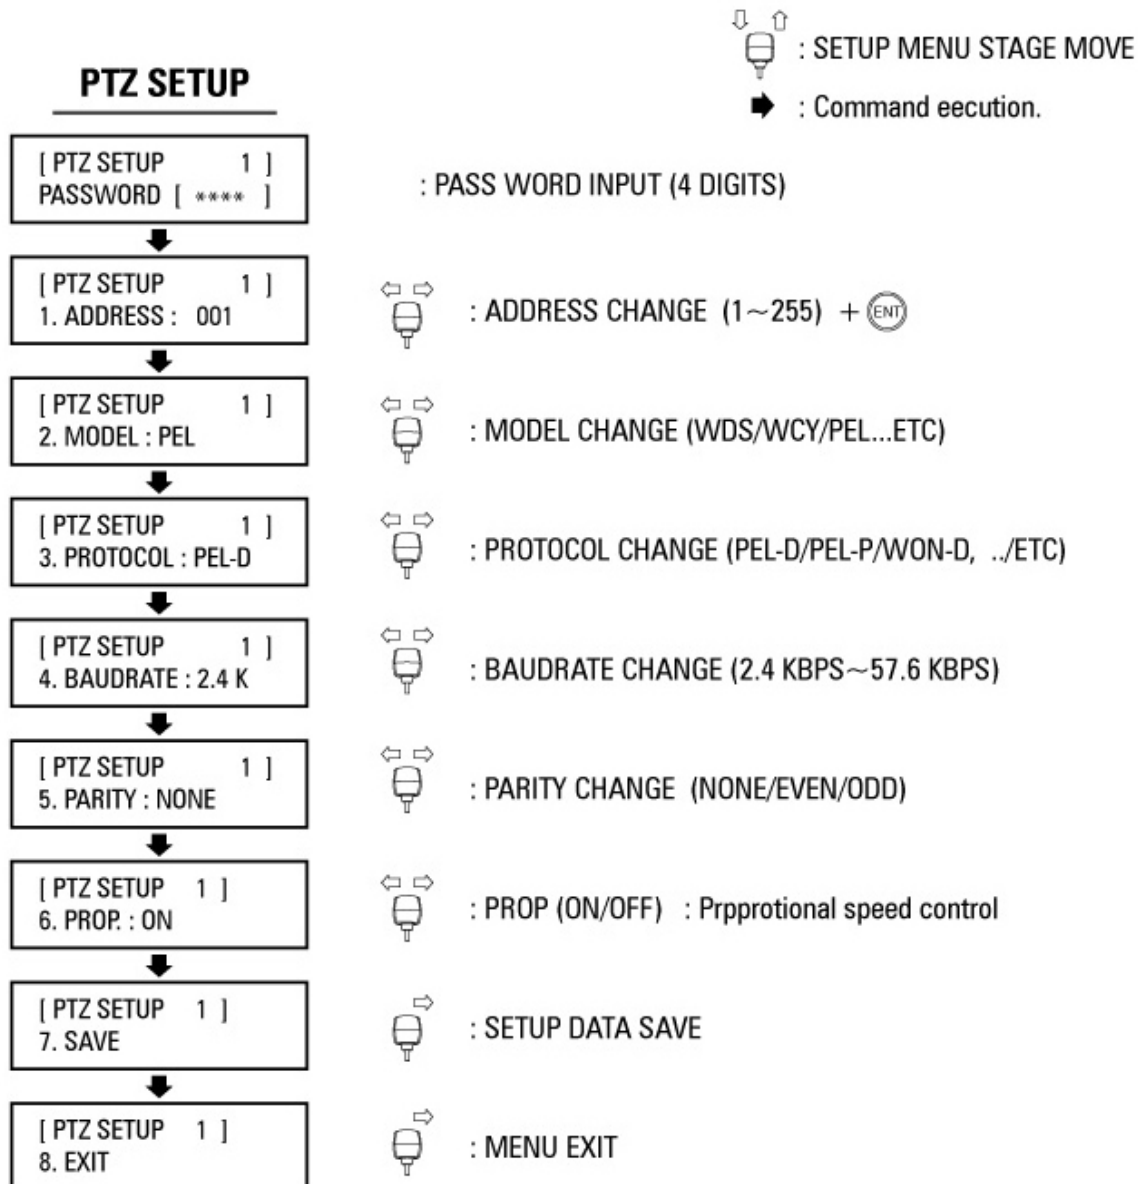

## Main Setup

 
Main Setup

Main Setup mode, Select 2 + , (2~3 seconds)

 
Setup screen allows you to make change each programmable clause.

Note: The baud rate must be the same between the controlled unit and the keyboard.

## MAIN SETUP

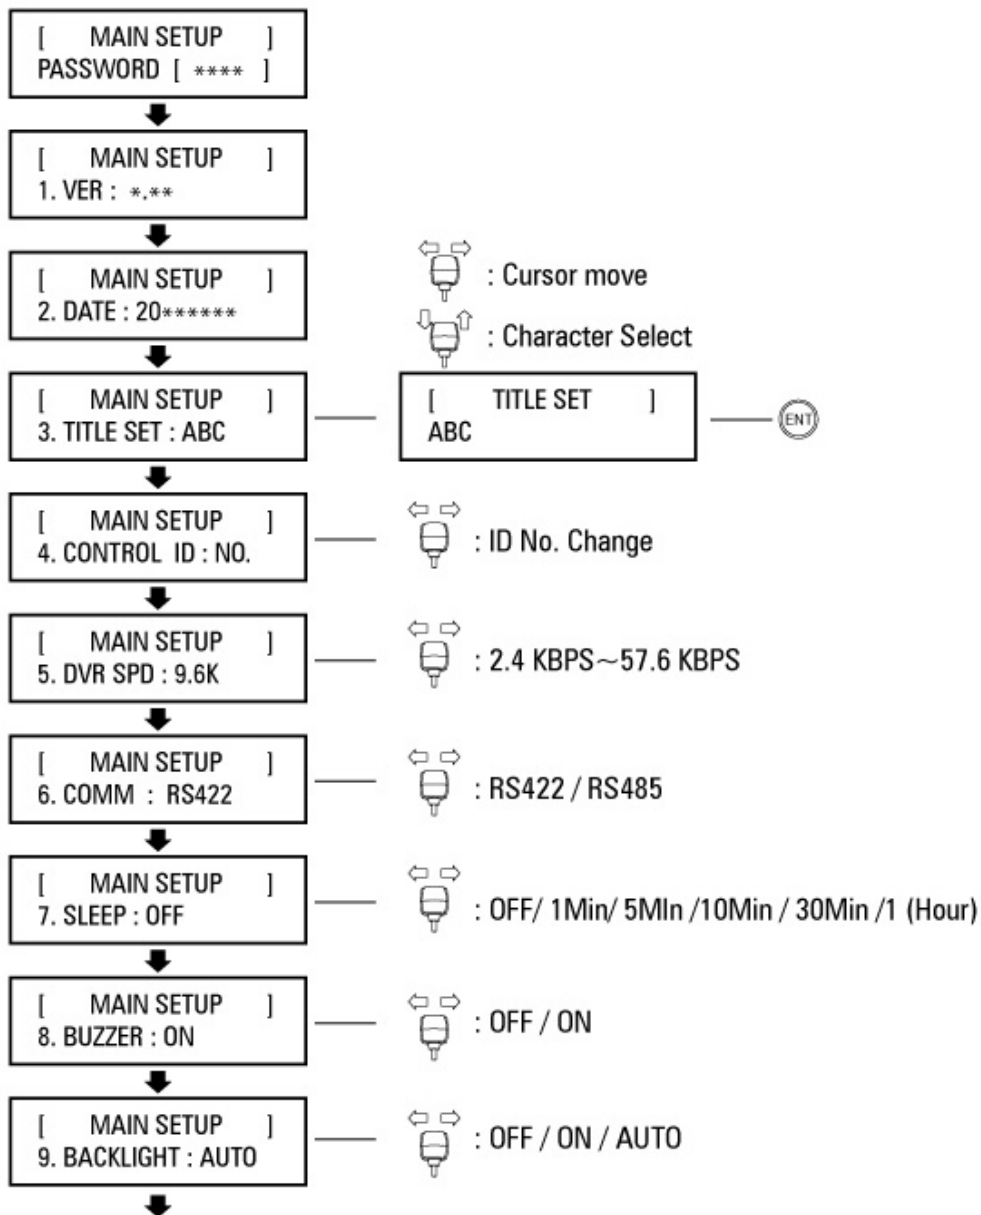




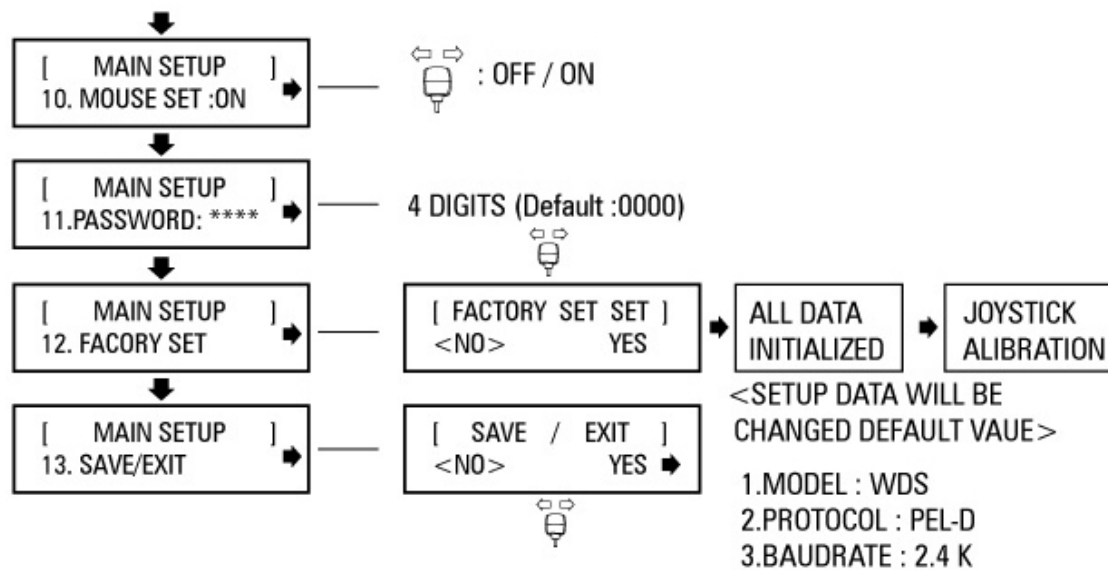

## Joystick Calibration

It is for the keyboard to set the Max. movement of joystick.

 Calibration method : Joystick move {Position Value} +

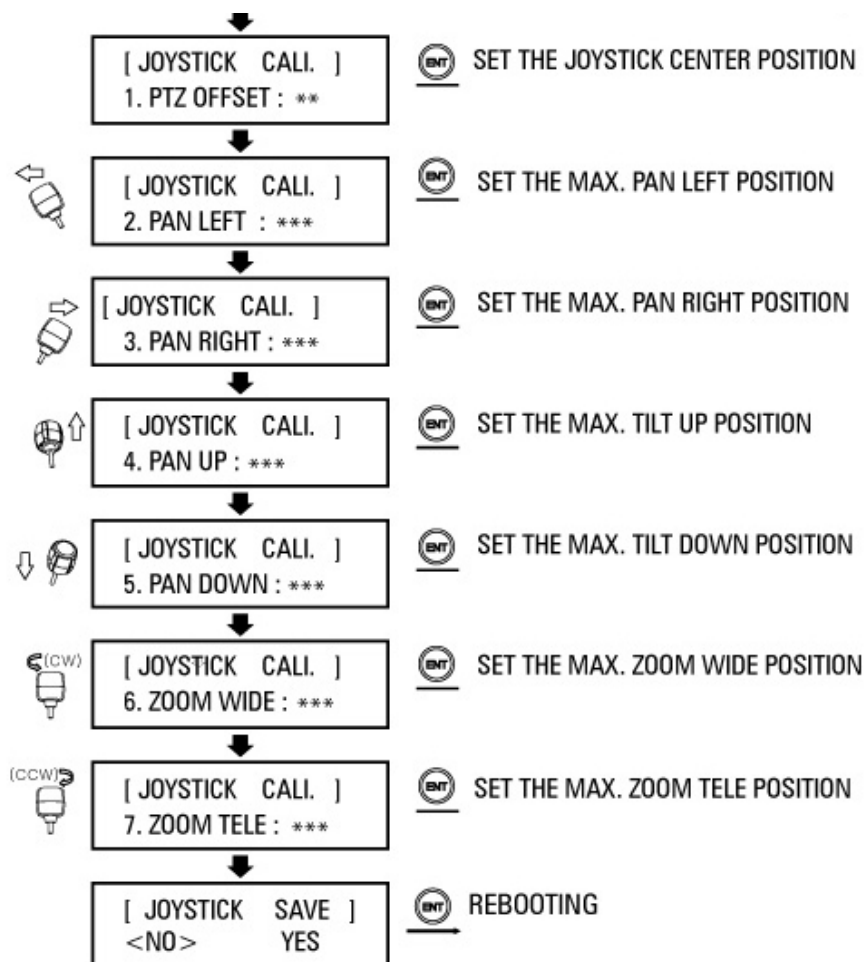

## Easy Setting Function {E.S.F}

Easy Setting Function (Number key + Function key)

Number key + PSET/TOUR/PATT/SCAN/E.S.F

Is current position data(pan, tilt, focus, zoom data) save or call Dome memory

### DATA SAVE (SET)

-  +  (PSET button 2 seconds push) ➡ Current Position Saved Preset No 2  
 +  (TOUR button 2 seconds push) ➡ TOUR MENU CALL OF DOME

### DATA CALL (GOTO)

-  +  (PSET button push) ➡ No 2 Preset position execution  
 +  (TOUR button push) ➡ No 3 TOUR Execution of DOME

|                        |                                                                   |
|------------------------|-------------------------------------------------------------------|
| Specifications         |                                                                   |
| Model                  | WTX – 1200A                                                       |
| Keyboard Communication | Interface : RS – 485 (Tx 3 port, Trx 1 port) P                    |
|                        | An/Tilt operating distance : 4700 ft(1029m) No 24 AWG wire        |
|                        | Protocol : Multiple (Pelco-D, etc), (Baud rate selectable)        |
| Connector Type Data    | TERMINAL BLACK (8P)                                               |
| Keyboard Keypad        | Rubber button                                                     |
|                        | Numeric keypad and camera function key                            |
| Joystick               | Stick 3-axis, variable speed with zoom                            |
| Input Voltage          | 12V DC or 9V batt (battery mode)                                  |
| Power Consumption      | Max. 140mA                                                        |
| LCD Display            | Graphic display : 16 * 2 Graphic display                          |
| Operation Temperature  | 0 to 45                                                           |
| Humidity               | 10% - 70% non-condensing                                          |
| Dimension & Weight     | 280(W) x 174(D) x 92(H), Net: 0.7 kg Gross: 1.7 kg                |
| Packing include        | WTX – 1200A keyboard, Adaptor                                     |
|                        | Packing include : Batt 9V, USB cable, Manual, Terminal Block (8p) |

3015 Eagle Drive, Suite 100, Grand Prairie, Texas 75052

Local Number: (214) 635-4855 / Fax: (214) 988-2858

sales@veilux.net

[www.veilux.net](http://www.veilux.net)